

PTFE Oil Seals

Installation Tips

- 1 Remove any oil or grease. The shaft surface must be completely dry throughout installation.
 - 2 Ensure that any imperfections or sharp edges on the shaft surface are removed.
 - 3 With the plastic sleeve still in place, line up the shaft face and plastic sleeve face.
 - 4 Apply even pressure to the seal and push on to the crankshaft.
 - 5 Carefully push the seal on to the crankshaft.
 - 6 Remove the plastic sleeve.
 - 7 The seal is now in place. Leave engine for 4 hours before starting to allow PTFE memory seal formation.
- X** Do not fit seal without plastic fitting aid or correct manufacturer tool. Do not lubricate.

